



PRO ARMOR

POLARIS RZR / S (P081031)


FRONT SKID PLATE

INSTALLATION INSTRUCTIONS

Please read these instructions carefully before installation to prevent injury to yourself or damage to your vehicle.

PARTS LIST:

ITEM	DESCRIPTION	QTY
1	FRONT SKID PLATE	1
2	M8 x 20mm FLANGED HEX BOLT	2
3	M8 FLANGED NUT	2

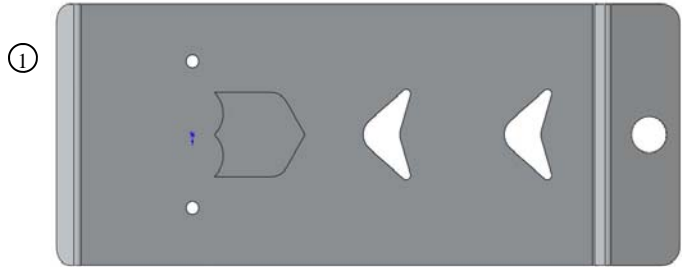

NOTE: For easier installation, install the front and rear mid skid plates before installing the front skid plate.

PREPARATION:


1. Un-install the front bumper's lower mounting hardware freeing the lower skid section of the bumper from the frame of the vehicle. Un-install the cup washer and mounting bolt from the front mid skid's forward center mounting point retaining the hardware for later reuse.

INSTALLATION:

1. Position the front frame skid between the front bumper's skid and the frame of the vehicle aligning its mounting points to those of the front bumper and vehicle frame. Loosely install (2) M8 x 20mm flanged hex bolts and (2) M8 flanged nuts as shown in the figure below.
2. The rear mounting point of the front skid plate should rest over the forward center mounting point of the front mid skid plate. Align the mounting holes and loosely re-install the retained cup washer and mounting bolt as shown in the figure below.
3. With all mounting points located and hardware loosely installed, tighten the mounting bolts securing the front skid plate to the vehicle.

MAINTENANCE:

Periodically check to see that the front skid plate is properly installed. Re-torque mounting bolts when necessary. Do not operate the vehicle if any bolts or fasteners are loose or missing.

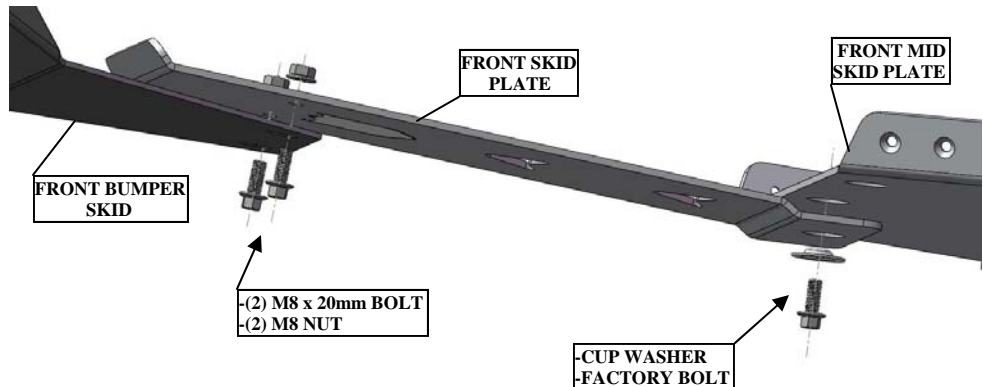

CUSTOMER SERVICE:

For further information, please contact Pro Armor at 1-951-343-9270.