




PRO ARMOR

**POLARIS RZR / S (P081032)
MID SKID PLATE SET
INSTALLATION INSTRUCTIONS**

Please read these instructions carefully before installation to prevent injury to yourself or damage to your vehicle.

PARTS LIST:

ITEM	DESCRIPTION	QTY
1	FRONT MID SKID PLATE	1
2	REAR MID SKID PLATE	1

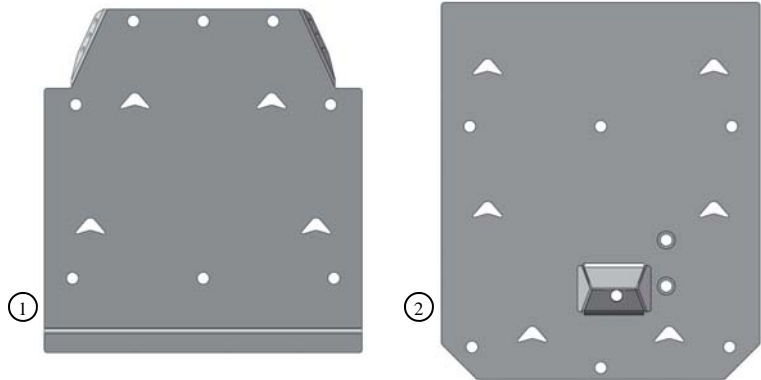

PREPARATION:


1. Remove the plastic factory skid from the vehicle retaining all factory mounting bolts and cup washers.

INSTALLATION:

1. Position the rear mid skid plate beneath the mid rear section of the vehicle's frame aligning the mounting points of the skid plate to the mounting points of the frame. Loosely re-install the retained factory mounting hardware at each of the mounting points.
2. Position the front mid skid plate beneath the main front section of the vehicle's frame aligning the mounting points of the skid plate to the mounting points of the frame. Loosely re-install the remaining retained factory mounting hardware at each of the mounting points.
3. With all mounting points located and mounting hardware loosely installed, tighten down the mounting bolts securing the front and rear mid skid plates to the frame of the vehicle.

MAINTENANCE:

Periodically check to see that the front and rear mid skid plates are properly installed. Re-torque mounting bolts when necessary. Do not operate the vehicle if any bolts or fasteners are loose or missing.

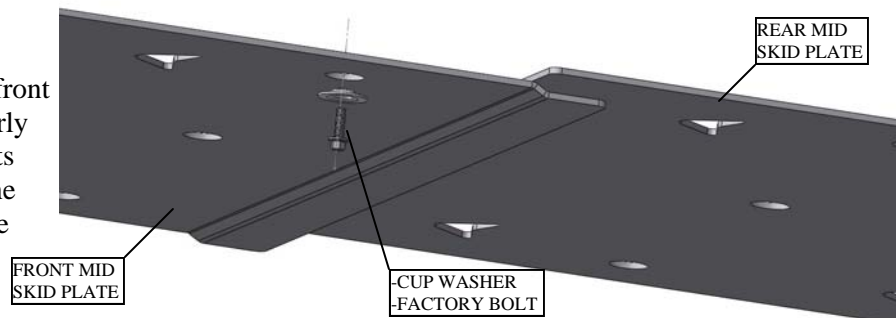

CUSTOMER SERVICE:

For further information, please contact Pro Armor at 1-951-343-9270.