




PRO ARMOR

POLARIS RZR / S (P081033)
REAR SKID PLATE
INSTALLATION INSTRUCTIONS

Please read these instructions carefully before installation to prevent injury to yourself or damage to your vehicle.

PARTS LIST:

ITEM	DESCRIPTION	QTY
1	REAR SKID PLATE	1
2	CUP WASHER	2
3	M6 x 20mm FLANGED HEX BOLT	1
4	SELF-TAPPING BOLT	2

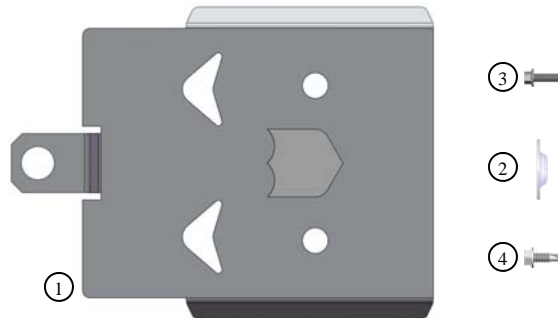


NOTE: For easier installation, install the front and rear mid skid plates before installing the rear skid plate.

PREPARATION:

1. Un-install the cup washer and mounting bolt from the rear mid skid's rear center mounting point retaining the cup washer for later reuse.

INSTALLATION:

1. Position the rear skid plate beneath the rear section of the vehicle's frame aligning the forward mounting point to the rear center mounting point of the rear mid skid plate. Re-install the retained factory cup washer and install (1) M6 x 20mm flanged hex bolt.
2. Pre-drill (2) pilot holes through the frame centered at the (2) rear mounting points. Install (1) cup washer and (1) self-tapping bolt at each of the (2) rear mounting points securing the rear frame skid plate to the frame of the vehicle.

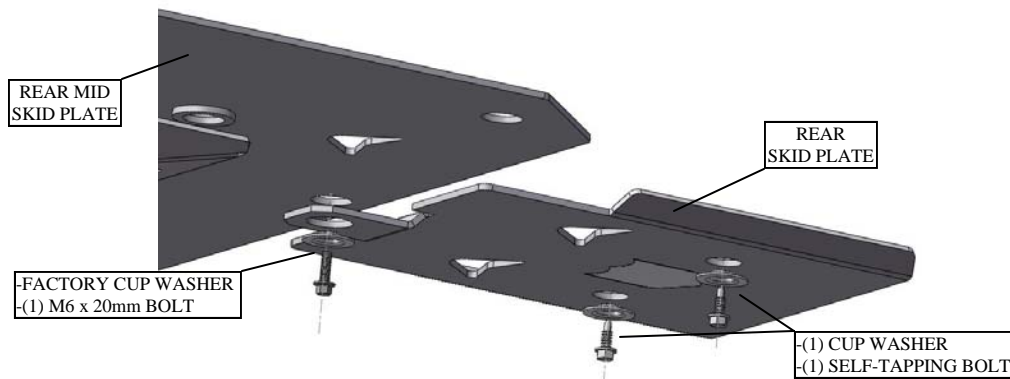

MAINTENANCE:

Periodically check to see that the rear skid plate is properly installed. Re-torque mounting bolts when necessary. Do not operate the vehicle if any bolts or fasteners are loose or missing.

CUSTOMER SERVICE:

For further information, please contact Pro Armor at 1-951-343-9270.

