



PRO ARMOR









POLARIS RAZR (P081041)

REAR BUMPER

INSTALLATION INSTRUCTIONS

Please read these instructions carefully before installation to avoid injury to yourself or damage to your ATV.

PARTS LIST:

ITEM	DESCRIPTION	QTY
1	 REAR BUMPER	1
2	 RIGHT UPPER MOUNTING BRACKET	1
3	 LEFT UPPER MOUNTING BRACKET	1
4	HARDWARE KIT	1
	 M8 x 16mm BOLT QTY: 6	
	 M8 NUT QTY: 6	
	 M6 x 20mm BOLT QTY: 4	
	 6mm WASHER QTY: 4	
	 M6 NUT QTY: 4	

INSTALLATION DIAGRAM



FIG. 1

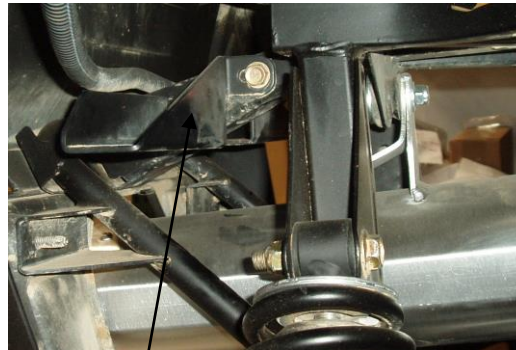


FIG. 2

RIGHT UPPER MOUNTING BRACKET

1. Install the left and right upper mounting brackets onto the frame of the vehicle as shown in fig. 2 using (2) M6 x 20mm bolts, (2) 6mm washers and (2) M6 nuts for each of the mounting brackets.
2. Position the rear bumper so that the mounting holes on the lower mounting plate are aligned with those on the frame of the vehicle. Install (1) M8 x 16mm bolt and (1) M8 nut at each of the (4) mounting points.

3. The mounting points of the rear bumper's upper mounts should be aligned to those of the installed upper mounting brackets. Attach the rear bumper's upper mounts to the upper mounting brackets using (1) M8 x 16mm bolt and (1) M8 nut for the left and the right upper mount.

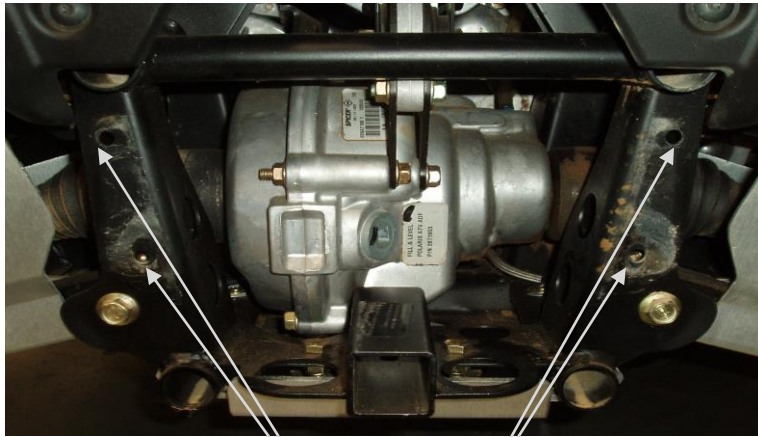


FIG. 3

LOWER MOUNTING POINTS

4. With all mounting points located and hardware installed, tighten down all bolts and fasteners securing the rear bumper to the frame of the vehicle.

CUSTOMER SERVICE:

For further information, please contact PRO ARMOR at 1-951-343-9270.