




PRO ARMOR

**POLARIS RAZR S
REAR A-ARM GUARDS (P091024)
INSTALLATION INSTRUCTIONS**

Please read these instructions carefully before installation to prevent injury to yourself or damage to your ATV.

PARTS LIST:

PART	DESCRIPTION	QTY
1	REAR A-ARM GUARD (L)	1
2	REAR A-ARM GUARD (R)	1
3	1/4-20 x 3/4" SELF TAPPING SCREW	4

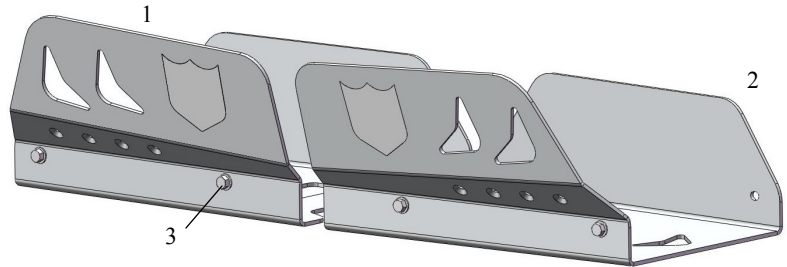


PREPARATION:

1. Remove the plastic factory rear A-Arm guards from the vehicle retaining the mounting hardware.
Note: Remove the rear wheels from the vehicle for easier installation.

INSTALLATION:

1. Position the left rear A-Arm guard under the vehicle's left rear A-arm. Align the mounting holes of the A-Arm guard to the mounting holes on the vehicle's A-arm. Re-install (2) factory mounting hardware at the A-Arm guards forward mounts as shown in the diagram below. Install (2) self tapping screws at the A-arm guards rear mounts as shown in the diagram below. Repeat procedures for right rear A-Arm guard.

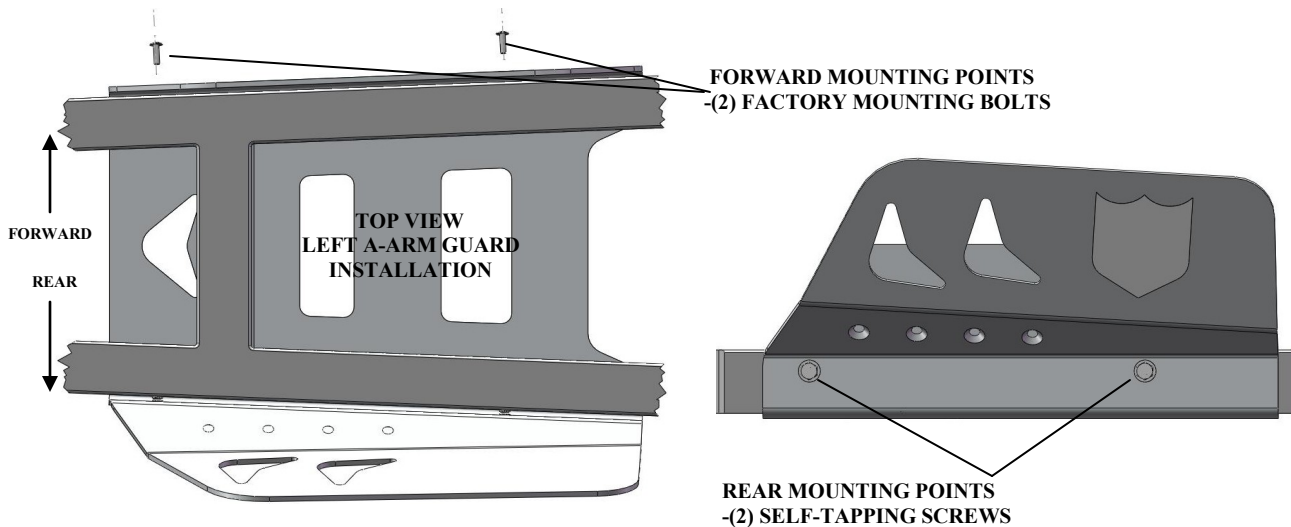

MAINTENANCE:

Periodically check the tightness of the mounting bolts and that the A-Arm guards are securely installed. Re-torque bolts when necessary. Do not operate the vehicle if any bolts or fasteners are loose or missing.

CUSTOMER SERVICE:

For further information, please contact PRO ARMOR at 1-951-343-9270.

