




PRO ARMOR

POLARIS RAZR 4 (P101206) DOOR NETS INSTALLATION INSTRUCTIONS

Please read these instructions carefully before installation to prevent injury to yourself or damage to your vehicle.

PARTS LIST:

PART	DESCRIPTION	QTY
1	FRONT DOOR NET	2
2	REAR DOOR NET	2

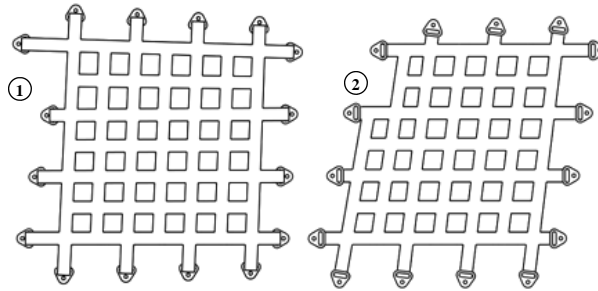


PREPARATION:

1. P101206 Door Nets are to be installed with the P101202 Side door application. Please make sure that the side doors are properly installed on the vehicle. Locate the mounting hardware for the door nets from the P101202 hardware kit. The hardware should consist of (62) M6 x 16mm button head bolts and (62) M6 nyloc flanged nuts.

INSTALLATION:

1. Position (1) front door net over the swinging door section of the front left side door. Align the mounting tabs of the door net to the mounting tabs located on the door. Loosely install (1) M6 x 16mm button head bolt and (1) M6 nyloc flanged nut at each of the mounting points (16) total.
2. Position (1) rear door net over the swinging door section of the rear left side door. Align the mounting tabs of the door net to the mounting tabs located on the door. Loosely install (1) M6 x 16mm button head bolt and (1) M6 nyloc flanged nut at each of the mounting points (15) total.
3. With all mounting points located and hardware loosely installed, tighten the mounting bolts securing the door nets to the front and rear left side doors see Fig. 1 and 2. Repeat the procedure for the right side doors.

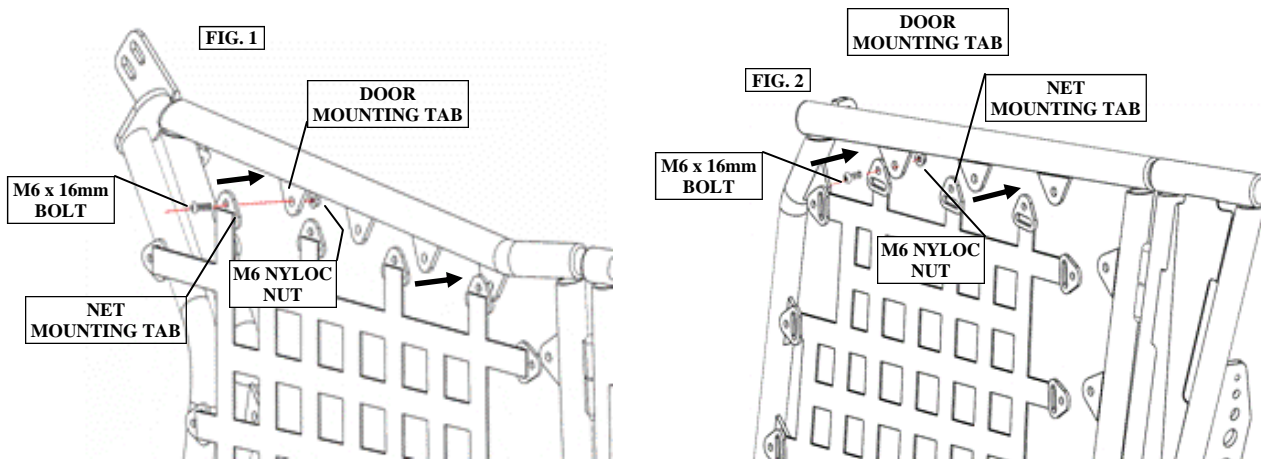

MAINTENANCE:

Periodically check to see that the doors nets are properly installed. Re-torque mounting bolts when necessary. **Do not operate the vehicle if any bolts or fasteners are loose or missing from the doors. Do not operate the vehicle with doors open!**

CUSTOMER SERVICE:

For further information, please contact Pro Armor at 1-951-343-9270.

P101206