

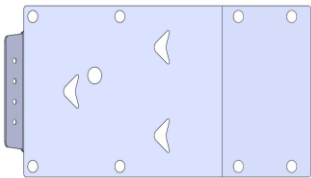



PRO ARMOR

**KAWASAKI TERYX 750 (K082021)
FRONT SKID PLATE
INSTALLATION INSTRUCTIONS**

Please read these instructions carefully before installation to avoid injury to yourself or damage to your ATV.

PARTS LIST:

ITEM	DESCRIPTION	QTY
1	 FRONT SKID PLATE	1
2	HARDWARE KIT  CUP WASHER – QTY:8	1

PREPARATION:

Remove the stock plastic front skid from the vehicle along with its cup washers retaining the mounting bolts. If stock bolts spin in their mounts excessively, apply downward pressure to the stock skid plate while loosening the bolt.

INSTALLATION:

1. Re-position the Pro Armor front skid plate in place of the stock plastic skid aligning the mounting holes.
2. Install (1) cup washer supplied in the hardware kit and re-install (1) stock mounting bolt for each of the (8) mounting points.
3. Tighten down the mounting bolts securing the front skid plate to the frame of the vehicle.

CUSTOMER SERVICE:

For further information, please contact PRO ARMOR at 1-951-343-9270.

K082021