



PRO ARMOR


KAWASAKI TERYX 750

**FRONT BUMPER SKID PLATE (K082028)
INSTALLATION INSTRUCTIONS**

Please read these instructions carefully before installation to prevent injury to yourself or your vehicle.

PARTS LIST:


PART	DESCRIPTION	QTY
1	SKID PLATE	1
2	MOUNTING HOOK	4
3	M6 x 16mm FLAT SOCKET HEAD BOLT	4

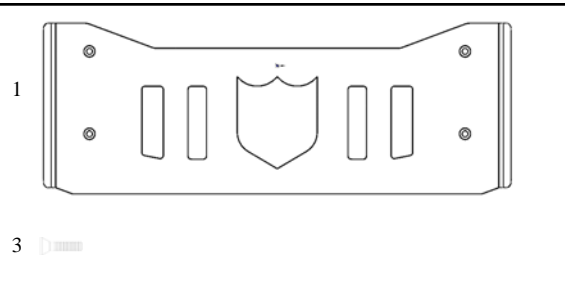

PREPARATION:

Make sure that you are using the front bumper skid plate with a Pro Armor front bumper and that it is properly installed on your vehicle.

INSTALLATION:

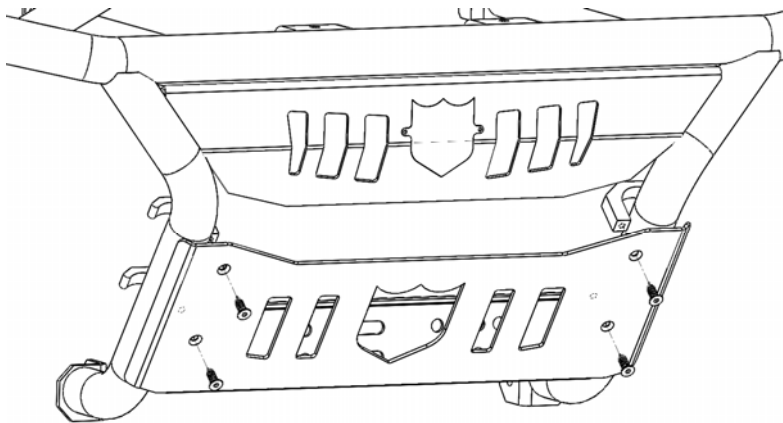

1. Position the front bumper skid plate over lower part of the front bumper's upright tubes as shown in the diagram.
2. Position the mounting hooks so that they wrap the tubing of the front bumper and so that the mounting holes are aligned to those on the skid plate. Install (4) M6 x 16mm flat socket head bolts through the skid plate into the mounting hooks securing the front skid plate onto the front bumper.

MAINTENANCE:

Periodically check to see that front bumper skid plate is securely installed onto the front bumper. Re-torque/replace any bolts or fasteners that are loose or missing. Do not operate the vehicle if any bolts or fasteners are missing.

CUSTOMER SERVICE:

For further information, please contact PRO ARMOR at 1-951-343-9270.



K082028